



ANIMATED ALARM CLOCK

Dreamland Crossing™

Instructions
for Use



WARNING: This item is not a toy.

Keep these instructions for future reference as they contain important information.

IMPORTANT SAFETY INSTRUCTIONS

 
 
- Read these instructions and keep them for future use.
- Observe all warnings and follow instructions.
- Only use this product as it was intended.
- Do not use near water.
- Do not use near any heat source or apparatus that produces heat.
- Clean only with a dry cloth.
- Only use as intended.
- Do not attempt to service the unit yourself. All servicing should be referred to qualified personnel, and done so under the following conditions:
 - When power supply has been damaged.
 - If liquid has been spilled, or objects have fallen into the unit.
 - If the unit is exposed to rain or water.
 - If the product does not operate normally when following the instructions.
 - If the unit has been dropped or damaged in any way.
 - When the product exhibits a distinct change in performance.
- In the event that a replacement part is needed, ensure the service technician uses parts specified by the manufacturer to avoid fire, electric shock or other hazards.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INSTRUCTIONS FOR USE

(controls can be found on bottom of clock)

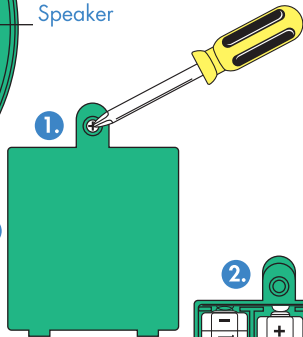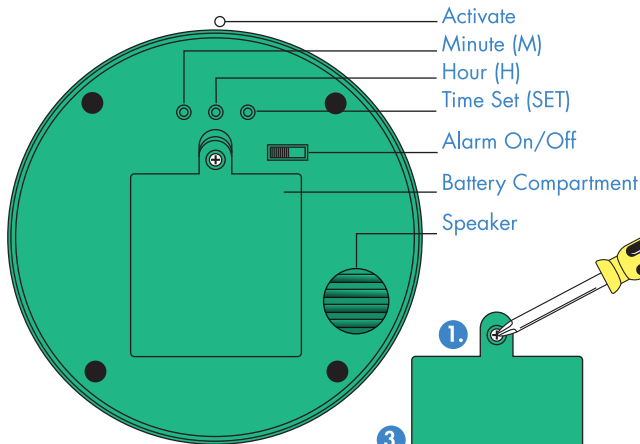


Installing/Replacing the Batteries

This unit requires 3 AA batteries (included)

Note: Batteries should always be installed by an adult.

 1. Use a Phillips screwdriver to open the battery compartment door located on the bottom of the unit.
2. Insert 3 AA batteries into clock with + and - terminals as indicated in the the illustration to the right.
3. Replace the compartment door and tighten up the screw with a Phillips head screwdriver. Do not over-tighten the screw.

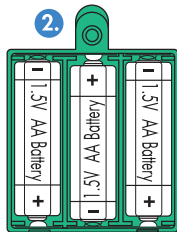

TO SET THE TIME:

- Hold the SET button down until the clock blinks.
- Then, use the HOUR and MIN buttons to set your time. The clock will display "AM" for morning and "PM" for night.
- When the time is correct, tap the SET button twice. It is now set.
- The clock is a backlit LCD. To see the time, tap the front button underneath the display.

TO SET THE ALARM:

- Be sure the ON/OFF switch is in the ON position.
- Hold down the SET button until the clock blinks, then tap the SET button once more.
- Use the HOUR and MIN buttons to set your alarm time. The clock will display "AM" for morning and "PM" for night.
- When the alarm time is correct, tap the SET button once. Your alarm is now set.
- The time you set will be the final alarm (wake time).

HOW THE ALARM WORKS:

To allow your child to wake up gradually, this alarm features a 3-sound wake-up system.

- 5 minutes before the wake time, your clock will make some light noise to begin easing your child awake.
- 2 minutes before the wake time, your clock will make more noise and add flashing lights.
- At the wake time, your clock will get louder and the actions starts!
- Alarm automatically shuts off after 5 minutes.
- You can also stop the alarm by pressing the front button underneath the clock display.
- The alarm will remain set for the next day unless you change the bottom switch to OFF.

TO ACTIVATE WITHOUT THE ALARM:

- Tap the front button under the display to light up the time with no sound.
- Press and hold the front button under the display, and your clock will come to life!

NOTE:

You may use a micro USB cord instead of batteries to power your clock. The rear of the clock has a port for that, but the cord is not supplied.

Making a Warranty Claim, United States

Please check playmonster.com for the latest information pertaining to warranty claims. At the company's discretion, PlayMonster LLC will repair or replace the defective unit. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE, BEGINNING WITH THE ORIGINAL DATE OF PURCHASE. NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

Making a Warranty Claim, Outside of the United States

This product is distributed outside of the United States, in select regions, by authorized distribution partners. PlayMonster does not handle foreign warranty claims. For warranty service please contact your point of purchase for assistance. PlayMonster products purchased from U.S. retailers and shipped to international locations are not covered under our domestic warranty policy.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your clock. To avoid battery leakage:

- Adult supervision is recommended when changing batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the clock before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the clock.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Batteries may explode or leak if disposed of in a fire.
- Remove batteries from a product if it will not be used for a month or longer.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

Care and Maintenance

Remove batteries before cleaning. Use a soft, damp cloth to wipe down the exterior. Do not use liquid, aerosol or abrasive cleaners. Let the unit air dry completely before returning batteries and resuming use. Product may wear, over time, with use. Parents should periodically examine this product for potential hazards. Any potentially hazardous parts should be repaired or replaced.

Limited Warranty

Coverage: In the United States, PlayMonster LLC warrants this product against defects in original material and workmanship for a period of one year under normal use and conditions. Warranty coverage outside of the United States may vary. Please see information regarding non-U.S. warranty claims, below.

Non-Coverage: This warranty does not cover customer instruction, installation, or set up problems. This warranty does not cover cosmetic damage or damage resulting from acts of God, accident, misuse, abuse, negligence, commercial application (or rental), or modification. This warranty does not cover damage due to improper operation or maintenance, connection to an improper voltage supply, or attempted repair by anyone other than PlayMonster LLC. This warranty does not cover products sold "as is" or "with all faults". This warranty is valid only in the United States and is invalid if the product serial number has been altered or removed.

Look for more great musical soothers,
toddler clocks and animated clocks
at playmonster.com!



PlayMoNSteR®



For more fun, visit playmonster.com.

Copyright © 2016 PlayMonster LLC, 1400 E. Inman Pkwy., Beloit, WI 53511 USA.
Made in China. All rights reserved. **Sleepyhead** is a trademark of PlayMonster LLC.

8051