

Super Spinner®

A new **SPIN** on swinging—safer, stronger and way more fun!™

Easily connects to a tree or swing set! • Holds up to 200 lbs.
Includes: Swing with Fully Adjustable Rope, 2 Locking Safety Clips

Ages
3+

Note: Extra equipment needed to hang from tree; may need extra equipment to hang from swing set.


CAUTION: Residential playground equipment may have limited weight capacity. Before installing your Super Spinner, verify that the supporting structure can hold your intended weight.

WARNING: Adult assembly and installation required.

Failure to follow these instructions may create a strangulation hazard.


Set up

- Super Spinner comes with spring clips (carabiners), C (in diagram shown), and fully adjustable rope to change the height of the Super Spinner.
- Use the 3-hole rope adjuster to adjust height, and to level the Super Spinner. Set it at 8" or more above ground. To use the rope adjusters, feed the rope through the holes and pull tight on the other side.

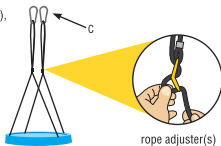

How to install your Super Spinner from a swing set

 - Remove old swing, if applicable, including any old spring clips (carabiners).
- Attach the Super Spinner carabiners (C) to your swing set hooks (A, for example, in diagram shown).
 - Your swing set hardware must have a nylon bushing (B, in diagram shown) where the hook (A) will pivot.
 - Your swing set may have a different type of hook. If that is the case, we recommend adding these hooks (A) with bushing.
- CAUTION: Neither the carabiners (C) nor the swing rope should be hung on a stationary hook (without nylon bushing). The metal carabiner or rope will rub against the metal hook and result in premature wear.




How to install your Super Spinner from a tree

Note: Tree Hanging Kit not included. Visit superspinner.com to purchase separately. Various sizes are available.



 Watch how to assemble!



From tree: Long Rope, (sold separately) to sturdy branch

We love seeing photos and video of fans having a blast with Super Spinner swings! Post them on Super Spinner's Facebook page to share the fun!

Wanna swing with more people or adults? Try the **super spinner**. It holds up to 650 pounds! Visit superspinner.com for more info!

WARNING:

- Keep these instructions for future reference.
- Observing the following statements and warnings reduces the likelihood of serious or fatal injury.
- Adult supervision required. Do not leave children unattended.
- To prevent serious injury, do not use the equipment until properly installed.
- This product is intended for outdoor family domestic use only. Not for commercial use.
- Falls onto hard surfaces and carpet can result in head or other serious injuries, including death to the equipment user. Never use over concrete, asphalt, wood, packed earth, grass, or other hard surfaces. Carpet over hard floors may not prevent injury. Always use protective surfacing on the ground under and surrounding the playground equipment.
- Swing seat should be hung no lower than 8" (20 cm) from the ground.
- Locate this product in a separate bay, away from other play equipment and structures.
- The minimum distance between this product and support poles when measured from the side of the swing perpendicular to the plane formed by the support poles must be the sum of 24" (61 cm) + the distance from the top of the swing seat to the support beam to which it is attached.
- It is recommended that orientation of the assembled product be such that direct sunlight is minimized on surfaces intended for standing or sitting.
- Attachment points should be 22" (55.8 cm) apart from each other.
- Swing seat should not swing within 6" (1.5 m) of any object around it. Objects to avoid include: Fences, buildings, garages, houses, overhead branches, utility lines, or electrical wires.
- Do not attach the product to other toys or swinging components such as, but not limited to: Swings, trapeze bars, trapeze rings, gliders, or upper body components such as horizontal ladders.
- For your safety, use only approved accessories for your Super Spinner products.
- Maximum two riders should be allowed on the swing at one time.
- Dress children appropriately, avoid loose-fitting clothing such as ponchos, scarves, hood and neck drawstrings, cord-connected items, caps, hie, and other sport helmets as these items could become entangled on the equipment and cause death by strangulation.
- Instruct children on proper swing use for their safety.
- Children should keep hands free of objects, inside of swing, and hold onto the ropes.
- Do not get off swing while it is in motion.
- Do not swing empty seats.
- Do not walk close to, in front of, behind or between the moving swing and other moving items.
- Always wear well-fitting shoes and full foot enclosing footwear while swinging. Examples of inappropriate footwear are clogs, flip flops, and sandals.
- Always sit with full weight in center of the seat.
- Do not loop ropes over the top support bar or twist the swing ropes since this may reduce the strength of the rope.
- Do not use the equipment in a manner other than intended.
- Do not allow children to climb on product when product is wet.
- Instruct children not to attach items to the product that are not specifically designed for use with the product such as, but not limited to: Jump ropes, clotheslines, pet leashes, cables and chains, as they may cause strangulation hazard.
- Maximum fall height protection up to 7' (2.1 m) recommended.



Once the unit is completely assembled and before children are allowed to play on it, proper shock absorbing surfacing material must be installed. The US Consumer Product Safety Commission's Outdoor Home Required Safety Handbook lists the following materials and required depths that are sufficient for home / residential application. Maximum fall height protection up to 7' (2.1 m) recommended.

Loose Fill Material	Required (Uncompressed) Depth
Wood Mulch	9" (229 mm)
Double Shredded Bark Mulch	9" (229 mm)
Uniform Wood Chips	12" (305 mm)
Fine Sand	12" (305 mm)
Fine Gravel	12" (305 mm)

When properly installed, shock absorbing protective material must extend a minimum of 6' (1.8m) in all directions from the perimeter of the equipment or from the outermost edges of any component. The protective surface must also extend in front and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.

Use Zone for Single- and Multi-Axis Swings

The use zone to the front and to the rear of to-fo swings shall be a minimum distance of 2X on a line extending 90° (1.57 rad) both front and rear from the longitudinal direction of the suspending beam, where X equals the vertical distance from the top of the protective surfacing to the pivot point of the swing. The total horizontal distance from the front to the rear of the use zone shall be not less than 4X. No component of the attached play structure or separate play structure shall encroach or end into the ground level protective surfacing area of the to-fo-use zone of a to-fo swing. The use zone surrounding the support structure of to-fo swings shall extend equal to or greater than 72 in. (1829 mm) in all directions from the structure. The use zone of the supporting structure may overlap other use zones. The use zone for a swing capable of unlimited lateral motion shall be a minimum horizontal distance of Y + 72 in. (1829 mm) in all directions from the pivot point of the swing, where Y equals the vertical distance between the pivot point and the top of the swing seat or suspended member. No play component of the attached play structure or separate play structure shall be located in the use zone of a swing element capable of unlimited lateral motion.

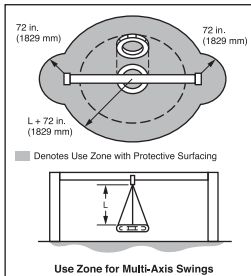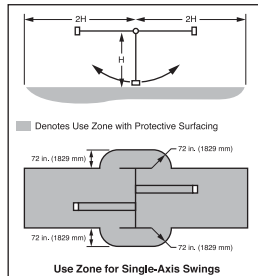

Maintenance The following checks should be performed on the product.

At the beginning of each season and twice monthly during the peak period:

- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Tighten all hardware.
- Lubricate all metallic moving parts.
- Check all moving parts including swing seats, ropes and crimps for wear, rust, or other deterioration. If any of these conditions exist, call 1-800-324-4263 to order replacement accessories.
- Check metal parts for rust or corrosion. If found, sand and repaint using a non-lead based paint meeting the requirement of 16 CFR 1303.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

At the end of each play season or when the temperature drops below 0°F/-18°C, remove this product and take indoors.

Disposal

Disassemble and dispose of equipment in such a manner that no hazardous conditions, such as but are not limited to, small parts and sharp edges, exist at the time equipment is discarded.

WARNING: Failure to perform periodic checks of this product could increase the likelihood of serious or fatal injury.

Limited Warranty

Coverage: In the United States, PlayMonster LLC warrants this product against defects in original material and workmanship for a period of two (2) years under normal use and conditions. Warranty coverage outside of the United States may vary. Please see information regarding non-U.S. warranty claims, below.

Non-Coverage: This warranty does not cover customer instruction, installation, or set up problems. This warranty does not cover cosmetic damage or damage resulting from acts of God, accident, misuse, abuse, negligence, commercial application (or rental), or modification. This warranty does not cover damage due to improper operation or maintenance or attempted repair by anyone other than PlayMonster LLC. This warranty does not cover products sold "as is" or "with all faults."

Making a Warranty Claim, United States

Please check playmonster.com for the latest information pertaining to warranty claims. At the company's discretion, PlayMonster LLC will repair or replace the defective unit. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE, BEGINNING WITH THE ORIGINAL DATE OF PURCHASE, NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER, WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER, UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

Making a Warranty Claim, Outside of the United States

This product is distributed outside of the United States, in select regions, by authorized distribution partners. PlayMonster does not handle foreign warranty claims. For warranty service please contact your point of purchase for assistance, PlayMonster products purchased from U.S. retailers and shipped to international locations are not covered under our domestic warranty policy.

Please remove all packaging including tags, ties and tacking stitches before use or giving this product to a child. THIS PACKAGING CONTAINS IMPORTANT INFORMATION. PLEASE KEEP IT FOR FUTURE REFERENCE.

U.S. PATENT - SEE WWW.SUPERSPINNER.COM/PATENTS
U.S. Pat. 8,454,540 / U.S. Pat. 9,067,146
U.S. Pat. 9,415,316 / U.S. Pat. 9,440,154

PlayMonster

We wanna hear about all the fun you had! Contact us at:

Customer Service • 1400 E. Inman Pkwy., Beloit, WI 53511
playmonster@playmonster.com • 1-800-524-4263
For more fun, visit playmonster.com.