

Ages 6+

# My Singing Monsters

## PLANT ISLAND

### Series 1 Collectibles

#### MONSTERS SING SOLO OR IN HARMONY!

Each Monster makes their own unique music, or they play with friends! Group more than one Monster together, and they automatically harmonize and sing in sync with each other just like in the game!

#### Series 1



Furcorn

Maw



Entbrat

Toe Jammer



Mammott



#### SERIES 1 BABIES AND EGGS

COLLECT ALL 8!

#### COMING SOON

Your Monster will come in TRY ME mode. To fully play and harmonize, switch to PLAY mode (red light will come on).

When in PLAY mode, push and hold the Monster's button to start all nearby Monsters singing!

You can mute/unmute a Monster by quickly pressing its button. To turn all Monsters off at once, hold down one Monster's button for several seconds until they go quiet.

Monsters have an auto off, but switch to OFF when not in use to conserve batteries.

**Note:** If you have multiple Monsters, it's best to position them in close proximity so they can "see" each other for harmonization.

You're a true collector now, so here's an exclusive in-game reward just for you!



Visit [mysingingmonsterstoy.com](http://mysingingmonsterstoy.com) to redeem and receive a special reward to use in your game!

Play Monster



Copyright © 2019 PlayMonster LLC, 1400 E. Inman Pkwy., Beloit, WI 53511 USA. Made in China. All rights reserved.  
[www.playmonster.com](http://www.playmonster.com)  
 1.800.524.4263  
[playmonster@playmonster.com](mailto:playmonster@playmonster.com)

MY SINGING MONSTERS™ is a licensed Trade-mark of Big Blue Bubble Inc. © 2018, Big Blue Bubble Inc.  
[www.bigbluebubble.com/](http://www.bigbluebubble.com/)  
[www.windsunsky.com](http://www.windsunsky.com)

#### Battery Safety Information:

- Adult supervision is recommended when changing batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or

- equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Batteries may explode or leak if disposed of in a fire.
- Remove batteries from a product if it will not be used for a month or longer.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

#### Battery Replacement:

- Open the back to access the battery compartment.
- Remove the screw with a small Phillip screwdriver.
- Open the lid, and replace the 3 1.5V LR44 button cell batteries.
- Close the lid, and insert the screw.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and

can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful

interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek medical attention immediately.

Keep these instructions. They contain important information.